

ARCADIS Varic

SP

Installation Instructions

System

Unpacking the Monitor Cart

© Siemens AG 2004

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Document revision level

The document corresponds to the version/revision level effective at the time of system delivery. Revisions to hardcopy documentation are not automatically distributed.

Please contact your local Siemens office to order current revision levels.

Disclaimer

The installation and service of equipment described herein is to be performed by qualified personnel who are employed by Siemens or one of its affiliates or who are otherwise authorized by Siemens or one of its affiliates to provide such services.

Assemblers and other persons who are not employed by or otherwise directly affiliated with or authorized by Siemens or one of its affiliates are directed to contact one of the local offices of Siemens or one of its affiliates before attempting installation or service procedures.

Table of Contents

3

1

Unpacking the Monitor Cart

4

Tools and aids required

4

Tools and aids required



Fig. 1: Tools

- Pry bar
- Hammer
- Set of Allen wrenches

Not depicted:

- Unloading ramp (included with the basic unit)
- Nails (fastened to the unloading ramp)
- Tool kit



Fig. 2: Cut and remove packing straps.

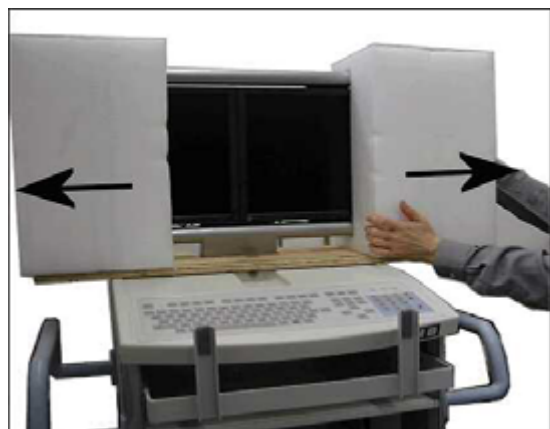


Fig. 3: Remove foam parts from displays.

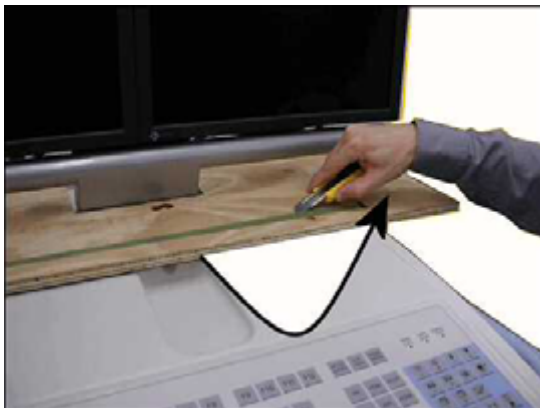


Fig. 4: Remove strap and transport safety device.

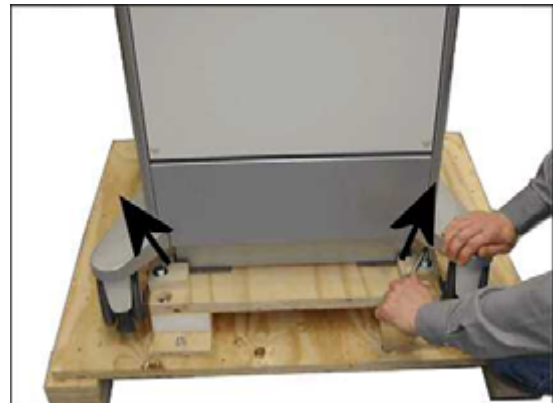


Fig. 5: Loosen and remove the two transport safety devices.



Fig. 6: Loosen the two screws on the left and right side of the transport safety device (see Fig. 7).



Fig. 7: Remove transport safety device in the direction of the arrow.



Fig. 8: Loosen the 2 unloading ramp extensions on both sides.



Fig. 9: Slide the two unloading ramp extensions under the front wheels and fasten by inserting one screw each into the front drill hole. The step of the unloading ramp extensions points forward (arrow).



Fig. 10: While lifting the side of the monitor cart, turn all 4 wheels to the rear.



Fig. 11: Fit the unloading ramp included with the basic unit into the steps of the two extensions. Fasten the unloading ramp using 2 nails.



Fig. 12: Move the monitor cart off the pallet.